



# P1 Quick Start Guide


Please read the guide carefully before using this product.



# Packing list.

## Notice:


Please check if any accessory is missing according to the list in the manual after unpacking.

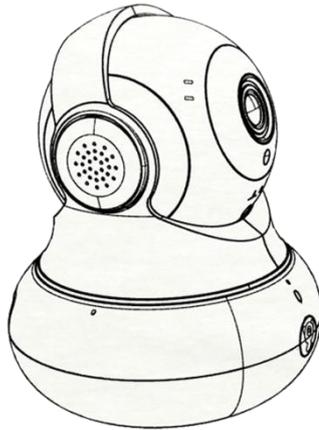

P1\*1




Bracket\*1

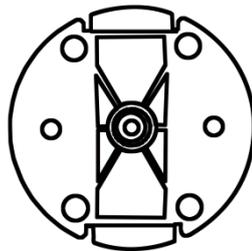

base gasket\*1




power plug\*1

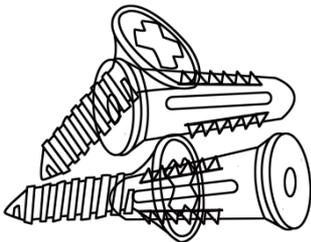


Screws\*1

white expansion  
Screws\*1

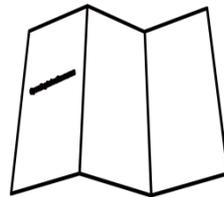


operation manual\*1

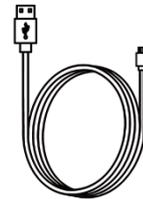

power cord\*1

# System Interface

Front

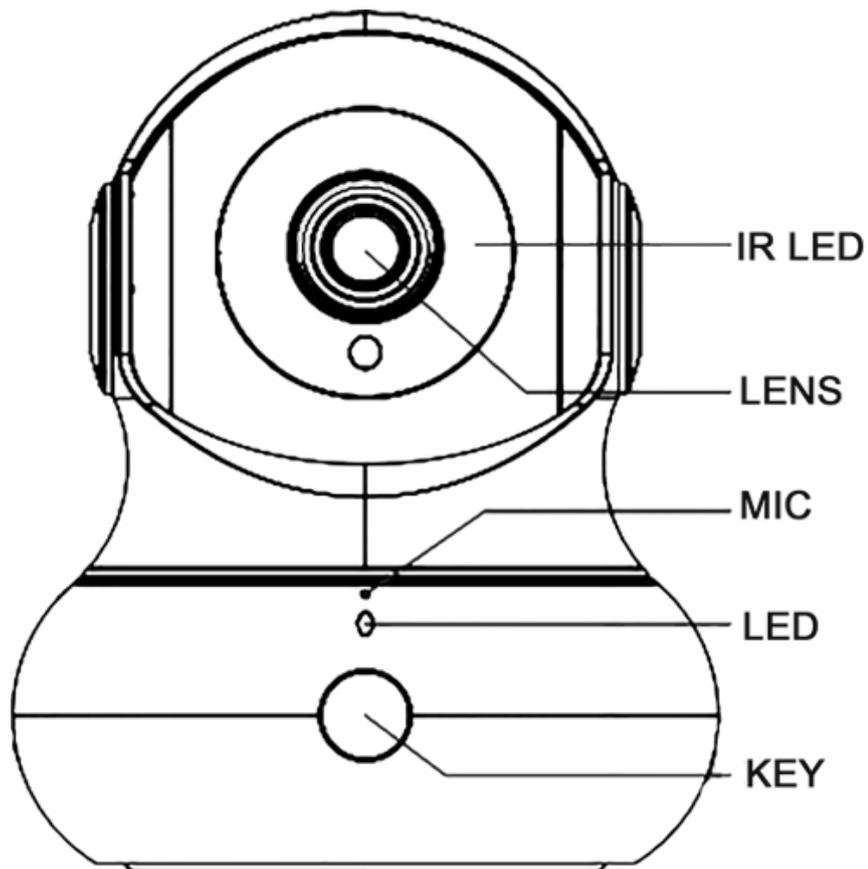


## Description

## Explanation

IR LED:	Photosensitive sensor +11 pieces
LENS:	3.6mm
MIC:	-34_3db
LED:	1pcs Two-color LED
KEY:	Push to call Button

Opposite schematic

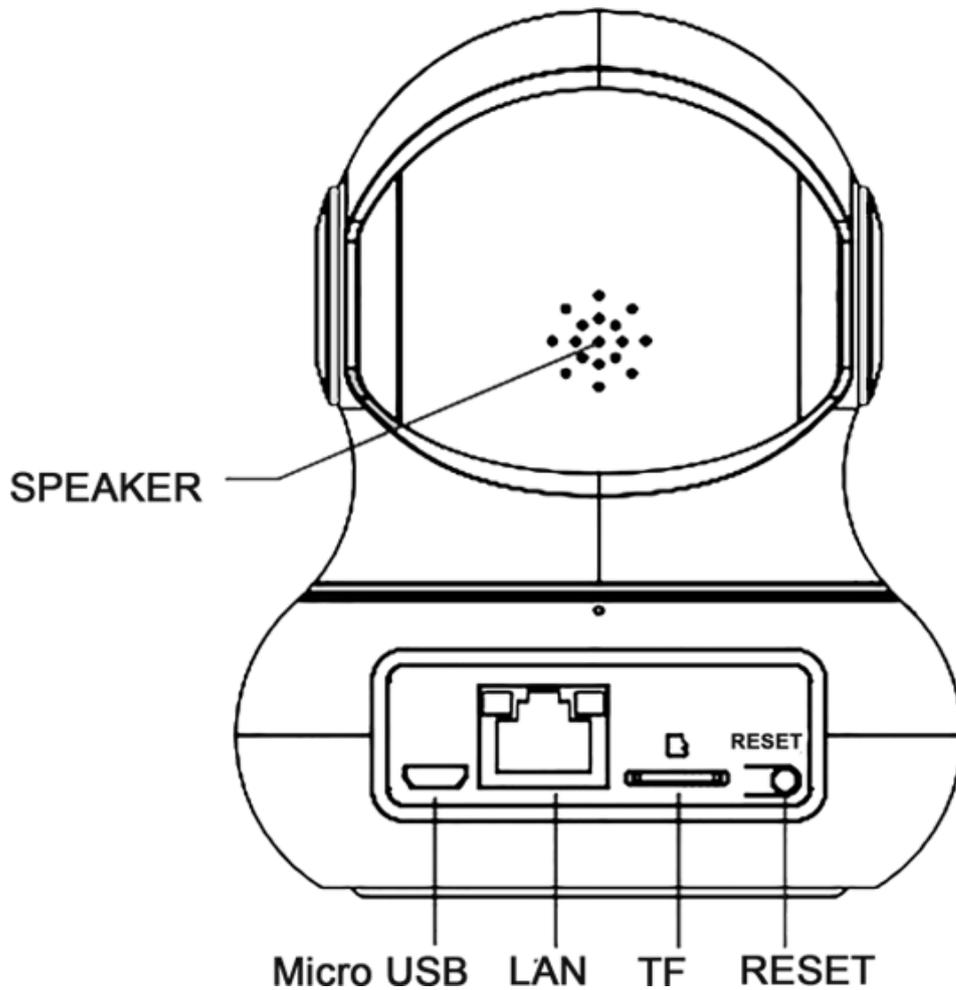

## Description

## Explanation

SPEAKER:	8Ω 1W
Micro USB:	5V 2A
LAN:	10M/100M adaptive ethernet interface
TF:	The biggest can support 128 GB
RESET:	Press “RESET” button for 3 seconds to reset

# Declarations

1. This manual is for guiding application. This manual provides photos, graphics, illustrations, QR code and so on, whose interpretation shall be only applicable to this product. There might be some discrepancies in the appearances of specific products, please refer to written explanations and actual products. If product version needs to be updated or other requirements are needed, may update this manual; if the latest manual is needed, please log in the official website to download the latest version.
2. Disclaimer: To the fullest extent permitted by law, products described in this manual (including hardware, software, firmware, etc.) shall be in accordance to its current situation. Littlelf does not provide explicit or tacit guarantees of any kind for possible defects, errors or failures, including but not limited to merchantability, quality satisfaction, fitness for a particular purpose, and non-infringement of third party rights, etc.; nor compensate for any special, incidental or indirect damages resulting from applying this manual or our products, including but not limited to loss of business profits, loss of data or documents. To the fullest extent permitted by law, Littlelf's liability shall not exceed the amount paid by you for purchasing this product. If suspension or termination of service is caused by following reasons: improper application and installation regardless of instructions, defending national or public interests, force majeure, misconduct of your own or third party, Littlelf shall not bear any responsibility for life damage or property loss to you or to any third person.
3. If this product is accessed to internet, network attacks, hacker attacks, virus infection or other risks might occur, which will result in abnormal working, information leakage and other problems. In this case, Littlelf shall not bear any liability, but will provide timely technical support.
4. Under proper installation, trespassing incidents can be perceived in a particular zone, but cannot avoid accidents or consequent life injury or property damage. Vigilance shall be raised and safety awareness shall be enhanced in daily life.
5. The pre-installed software has legitimate rights or has obtained legal authorization, and therefore unauthorized software is not recommended. Littlelf shall not bear any liability for incompatibility, unavailability, infringement, personal injury, property damage, compensation for third parties, or penalties, etc, which results from your installing software on your own.
7. Legal principle shall prevail in case of any discrepancies between above contents and legal principle.

## Product Warranty Card


Dear customers:

1. This product has one year warranty from the date of purchase. Within the warranty period, we provide free maintenance service for faulty products caused by its quality problems in the normal use condition.
  2. The following circumstances are not covered by warranty: Any failure or defect caused by improper environment or conditions. Improper installation, misuse, unauthorized maintenance, modification, accident, events of force majeure or any failure or defect caused by external factors.
  3. Any failure or defects caused by using a third-party product, software or components
  4. Exceeding the warranty period
  5. Failures or damages not caused by product design, technology, manufacturing, quality, etc.
  6. Maintenance fees will be charged if returned products do not conform to this warranty
- The faulty equipment without the company of other accessories shall be sent back for maintenance, and delivery fees back and forth shall be negotiated between two parties.

# Operating steps

## 1. Connect to power source

Connect the equipment to power source by the power cord.

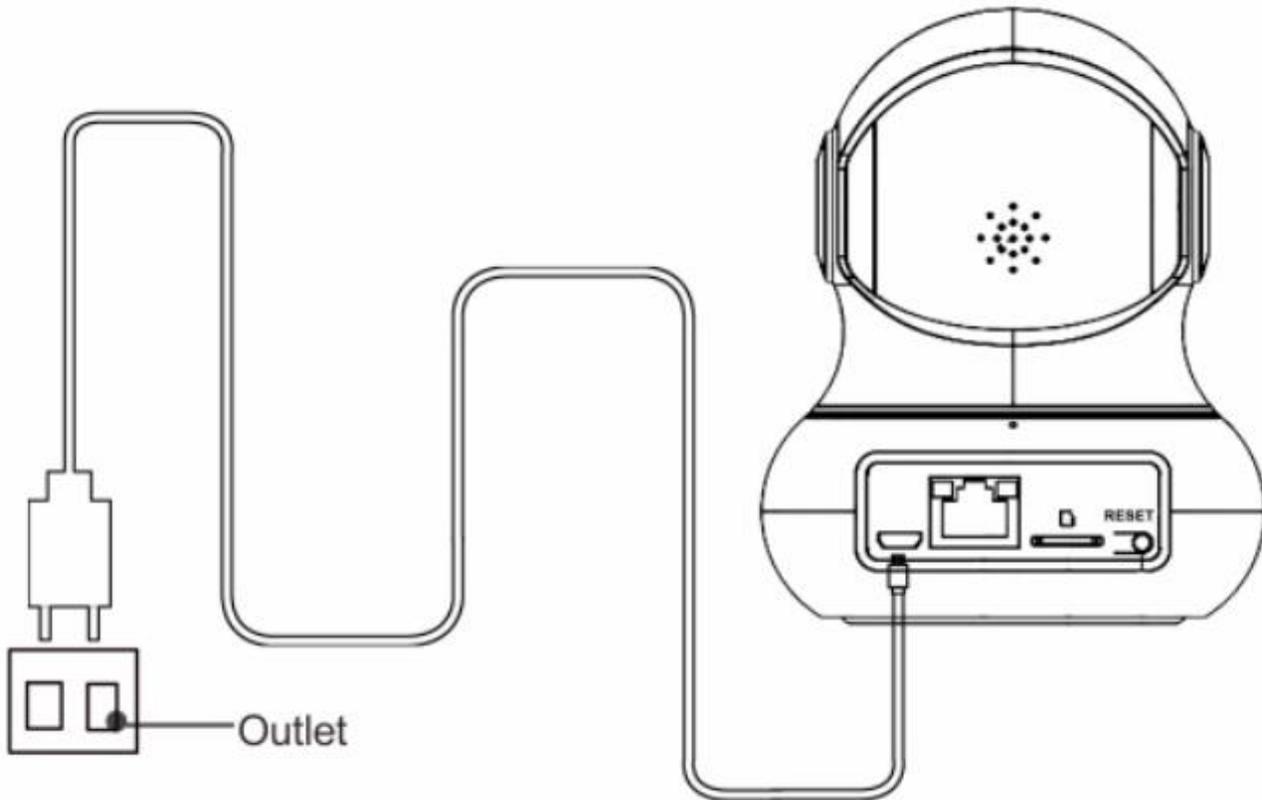

## Notice

When the indicator light flashes red, the equipment is started.

## 2. User registration

Method 1: Search the APP LITTLELF in APP Store, Google play or My app to download and install it.

Method 2: Scan the QR code on the package directly to download and install it.

### Illustration:

(1) Choose the right country, and input an authentic and valid e-mail address, the system will send a verification code automatically to the e-mail.

(2) E-mail address shall be authentic and valid in case verification code is missed.

(3) Click next step for setting password after entering the verification code, the registration will be successful.

# 3. Adding methods


## 1. Wireless addition:

Make sure the equipment is in red flashing mode. On hearing “beep”, click next step to connect WIFI.



### Wireless addition:

Configure the camera via WIFI and sound wave.

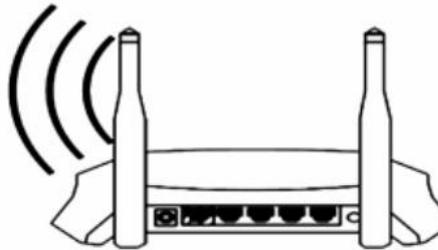


## 2. Wired addition:

Connect the camera to network via cable and router (this function is only applicable to tilting-head type).



### Wired addition:

Match through cable to connect router.

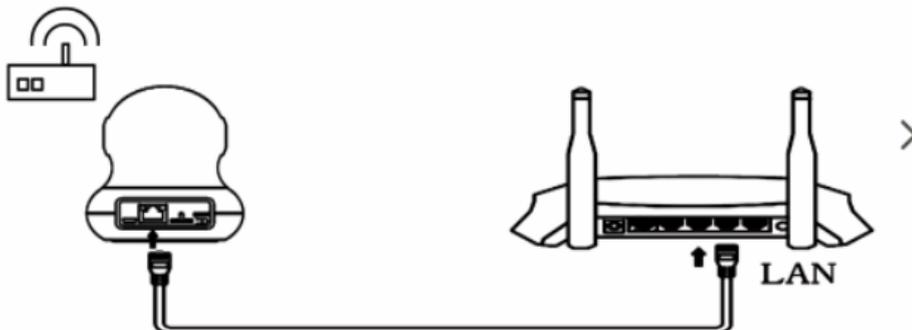


# Installation Instructions

Installing bracket

Installation 1:

Fixed equipment and support installation

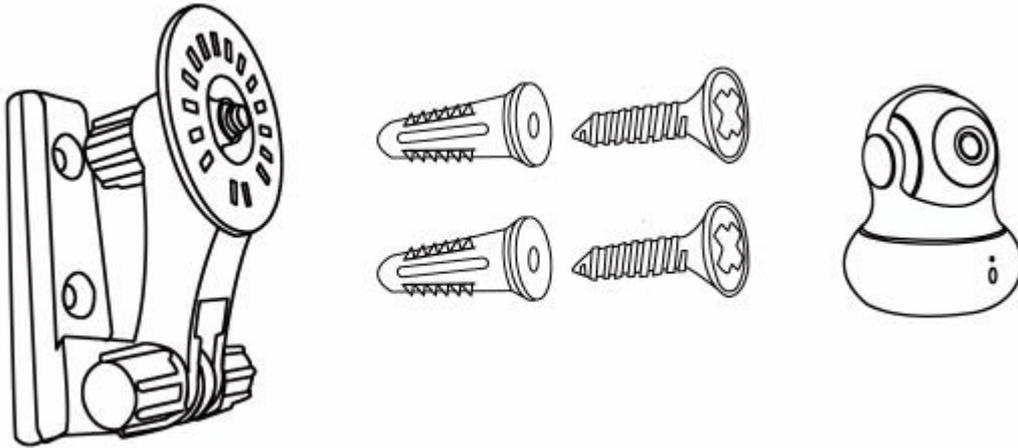

Pay attention to make the outlet of power source face down, and adjust the frame to its best picture according to the range you need when installing the bracket.

## Base gasket Installation 2:

Fix the base gasket and equipment base (clamp the gasket slot with two fingers, buckle the slot into the bottom slot, tighten in clockwise direction)

